



LOCATO-101



Works with Apple's Find My & Google's Find Hub



Works with

Apple Find My



Works with Android
Find Hub

FCC Regulatory Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation.

Electronic Label Exhibit

Product: LOCATO-101

Manufacturer: Atlanta Systems Pvt. Ltd.

FCC ID: 2BWNX-LOCATO

Electronic Label Description

The FCC identification label is permanently printed on the back side of the LOCATO-101 device.

The label contains the Model Number and FCC ID (2BWNX-LOCATO).

Item	Description
Product Model	LOCATO-101
FCC ID	2BWNX-LOCATO
Label Type	Permanent printed product label
Label Location	Back side of the device
Back Label Diameter	20 mm
Overall Device Diameter	33 mm

Label Location Statement

The electronic label is located on the back side of the LOCATO-101 device. The circular label has a diameter of 20 mm. The overall product diameter is 33 mm.

Illustrative Layout (Not to Scale)

Front View (Ø33 mm)



Back View (Ø20 mm)



Width: 20mm, Height: 5mm(Approx)

Overview

IN THE BOX

1 x LOCATO-101 Device (IP67 waterproof & dustproof)

1 x User Manual

FRONT



Power Button

REAR



Battery Cover

SIDE



Lanyard Space

Operation

Apple Find My App

Before using your LOCATO-101, attach it to your keys, wallet, backpack, luggage, handbag, or any valuable item you want to keep track of. Then, connect it to the Apple Find My app by following the steps below:

- Turn on Bluetooth function.
- Wi-Fi and mobile network connection must be in good condition.
- Turn on 'Location Services' :
Open 'Settings' > 'Privacy & Security' > 'Location Services' > 'Find My' (To see the most accurate location for your LOCATO-101, device turn on 'Precise Location' for Find My app.)

Note:

1. It is better to update your Apple devices to the latest version of iOS.
2. Allow notifications from the App.

Google Find Hub App

1. Download and install Find Hub App  from Google Play Store.
Note: If your phone already includes the app (Find Hub), proceed to the next step.
2. Turn on Bluetooth function of your phone.
3. Connect your phone to the Internet and keep the network signal strong.
4. Allow 'Find Hub' to access the location of your phone.

Note: One LOCATO-101 device can only be connected to one smart phone.

Power On

1. Press the Power Button once.
2. The red LED flashes once, indicating that the device has powered on.
3. The device automatically initializes and sends its data.
4. After completing the transmission, LOCATO-101 automatically enters sleep mode to conserve battery power.

Note: Sleep mode is the normal operating state of the device. It automatically wakes up whenever required during normal operation.

Power Off

LOCATO-101 does not require manual power-off during normal operation. After initialization and data transmission, the device automatically enters a low-power sleep mode to maximize battery life.

Operation	LED Status	Description
Power On	Red LED flashes once	Device powers on and starts initialization
Data Transmission	No user action required	Device automatically sends data
Sleep Mode	LED Off	Device enters low-power sleep mode to conserve battery

LOCATO-101 Device Setup

Apple

Quick Setup

Scan the QR code with the Camera App on your device to directly search for the LOCATO-101 device.



1. Press the Power Button once. The red LED will flash once, indicating that the device has powered on. The tracker will automatically enter pairing mode.
2. On your iPhone, open the Apple Find My app, select the 'Items' tab, then tap 'Add Item' > 'Other Supported Item'.
3. When 'LOCATO-101' appears in the list of available devices, tap Connect.
4. Assign a recognizable name to your 'LOCATO-101' and choose an emoji to help identify it in the Find My app.
5. Review the information and tap Agree to link the tracker to your Apple ID.
6. Once setup is complete, your 'LOCATO-101' will appear on the map in the Find My app. Tap Finish to complete the setup.
7. Your 'LOCATO-101' is now ready to use. Attach it to your keys, wallet, backpack, handbag, luggage, or any other valuable personal belongings using the built-in keyring hole.

Note: If the device is not paired with an Apple device within 10 minutes after being powered on, it will automatically power off to conserve battery power.

Reference: The following screenshots are for illustration purposes only. The actual interface may vary depending on your iPhone model and iOS version.



1. Open 'Find My'




2. Tap 'Item'



3. Tap 'Add Item'



4. Select 'Other Supported Item'



5. Searching




6. Tap 'Connect'



7. Enter 'Name'



8. Choose 'Emoji'

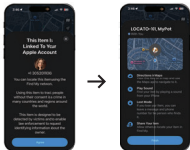

9. Click 'Agree'

10. Click 'Finish'


Google

1. Turn on the Bluetooth function of your phone and make sure the network is in good condition.
2. Open the Google 'Find Hub' app on your phone and log in to your Google account. (If you do not have an account, please register one.)
3. Press the Power button on LOCATO-101 device to power on.
4. A connection window will automatically pop up on your phone, select to connect the smart card. When successfully connected, you will hear a beep.

Automatic Setup



1. Install the Google "Find Hub" app from the Google Play Store on your phone.



2. Tap 'All Services', then open 'Connected Devices and Sharing' and select 'Devices'.



3. Enable "Scan for Nearby Devices" on your phone. When your LOCATO-101 appears under "Available Devices Nearby", tap it.




4. Just tap on the "Done" button and with that, your LOCATO-101 Setup is complete.



5. Now you can open the Google Find Hub app to explore all the features of LOCATO-101

Manual Setup



1. Go to your phone's Settings and select Google.



2. Turn on the LOCATO-101 near your phone and once the Fast Pair popup shows, tap "Connect".



3. Read the terms of use carefully and proceed by clicking on "Agree and continue".



4. Bring the LOCATO-101 close to your phone and wait for the device to be detected and paired.



5. Read the Terms of Use carefully and tap "Agree & Continue" to complete the setup.

Find Your Device When It Is Nearby

Apple

1. Open the 'Find My' app on your Apple device and select the 'Items' tab.
2. Tap on your named LOCATO-101 from the list shown and tap 'Play Sound'.
3. Your LOCATO-101 will beep.
4. Tap 'Stop Sound' to stop the beeps.

Google

1. Open the 'Find Hub' app on your phone and select the LOCATO-101 device..
2. Select 'Find nearby' then 'play sound' to get hints as you approach device.
3. Stop playing sound when you found the LOCATO-101.

Find Your Device Last Known Location (Apple)

1. Open the 'Find My' app on your Apple device and select the 'Items' tab.
2. Tap on your named LOCATO-101 from the list shown.
3. Your device last known location will be shown on the map in the emoji way.
4. To navigate to your device last known location, tap 'Directions' to open the Maps app and tap 'Go'.
5. Tap 'End Route' when you have located your device.

Notify When Left Behind (Apple)

1. Open the 'Find My' app on your Apple device and select the 'Items' tab.
2. Tap on your named LOCATO-101 from the list shown.
3. Pull up the App options and enable 'Notify When Left Behind' and tap 'Done' .
4. You will receive a notification on your Apple device when you leave your device behind and it's no longer in range.

Notify When Your LOCATO-101 Has Been Found In Lost Mode (Apple)

1. Open the 'Find My' app on your Apple device and select the 'Items' tab.
2. Tap on your named LOCATO-101 from the list shown.
3. Pull up the App options and tap on 'Enable' under 'Lost Mode'.
4. Information about Lost Mode will be displayed, tap 'Continue'.
5. Enter a contact phone number or email address and tap 'Next'.
6. You can now enter a message that will be shared with the person who finds your LOCATO-101 device.

Note: When 'Lost Mode' is enabled, your device is locked and cannot be paired to a new Apple device.
Operations may vary depending on the mobile version.
Please refer to the actual version for details.

Find Your Device When It Is Lost (Google)

When your device is lost:

1. Open 'Find Hub' app on your phone and select the 'LOCATO-101' device.
2. Select 'Mark as lost' and leave your contact information.

Note: If someone finds your device, they will receive a notification on their phone, They can learn about the contact information you left and contact you to return the device to you.


3. The last location of device will be shown on the map.
You can select 'Get directions' to navigate and look for it.
4. When you arrive at the last location of the device, your phone will receive a notification that indicates you have been to the location. You can choose 'End Route' and 'Play Sound' to get some hints for finding.
5. Once the device has been found, you can mark it as found.

Remove the LOCATO-101 from Device


Apple

1. Open the 'Find My' app on your Apple device and select the 'Items' tab.
2. Tap on your named LOCATO-101 from the list shown.
3. Pull up the App options and tap on 'Remove Item'.
4. A 'Remove Item' check screen will appear, and then tap on 'Remove'.
5. Your device will be disconnected from your Apple ID and automatically power off, you need to power it on before connecting to another Apple ID.


※ (You can operate as the following images which is for reference only.)



1. Select the item you want to remove from the list.



2. Open the selected item's details.



3. Swipe up and tap Remove Item.




5. Tap Remove to permanently remove the item.



4. Review the warning and item details.

Google

1. Open the 'Find Hub' app on your phone and select the LOCATO-101 device
2. Select the icon  to enter device details.



3. Select 'Remove from Find Hub' to remove the LOCATO-101 from Find Hub app.



4. When the LOCATO-101 device is removed successfully, it will automatically power off and you need to power it on before connecting to another Google account.

Reset the LOCATO-101 to factory settings

If you would like to disconnect your LOCATO-101 from your account so that it can be paired to another account, follow the steps below:

1. Remove the LOCATO-101 from the app as instructed on previous page.
2. On your LOCATO-101, press the Power button 5 times in quick succession and hold the button on the 5th pressing.
3. The LOCATO-101 will sound an audible beep with a flash of red light and perform the factory reset.

How to Find the Serial Number (Apple)

To find your device's serial number, follow the steps below.

1. Via the Find My app:
 - A. Open the Find My app, tap on 'Items' tab, and tap you named LOCATO-101 device from the list shown.
 - B. Scroll to the bottom of the Item Detail. The serial number is displayed below 'Manufacturer'.

TROUBLESHOOTING

Battery Status

Apple

1. Open the Find My app on your Apple device and select the 'Items' tab.
2. Tap on your named device from the list shown.
3. Underneath the name you have given to your LOCATO-101, a battery icon will display the current battery status.
4. When your named LOCATO-101 is in low battery, it will send notification to your Apple device.

Google

Check the battery status of the LOCATO-101 within the 'Find Hub' app.

1. Open the 'Find Hub' app on your phone and select the LOCATO-101 from the list shown.
2. A battery icon will display the current battery status under the device name.
3. If the device battery is low, change it immediately.

Cannot connect to the LOCATO-101

Apple

Please check the following situation:

1. Bluetooth function is turned on;
2. Network signal is good;
3. If neither of the above situations, you can identify your card or reset to connect again:
 - A. Open Find My app > 'Items' > 'Identify Found Item' > follow the prompt (If it has been linked to other ID, please contact with the manufacturer.)
 - B. Reset the LOCATO-101 and try to connect again. (If it has been linked to other ID, please contact with the manufacturer.)

Google

Please check the following situation:

1. Bluetooth function is turned on;
2. Network signal is good;
3. If neither of the above situations, you can reset the LOCATO-101 to factory settings or reboot your phone, then try to connect again.

The Location of item is not update timely

Apple

Please check the following situation:

1. LOCATO-101 and Bluetooth function of Apple devices are turned on;
2. Check whether your LOCATO-101 is reset and linked to other ID by identifying your LOCATO-101 in Find My app:
Open Find My app > 'Items' > 'Identify Found Item' > follow the prompt
(If it has been linked to other ID, please contact with the manufacturer.)
3. If neither of the above situations, please try to reboot your Apple device.

Google

1. Real-time location updates may be unavailable under poor network conditions;
2. The LOCATO-101 battery may be depleted;
3. If neither of the above situations, please try to reboot your phone.

Play a Sound Does not Work Within the Find My App

The LOCATO-101 is out of Bluetooth range, which is 40 meters/131.2 feet. Move closer to the LOCATO-101 using Directions within the Find My app, and then tap 'Play Sound' again.

DECLARATION

Find Hub helps you find and connect to what matters in a single, secure place. Find your belongings quickly and safely – even if your devices are offline. Plus, seamlessly and securely share your location with friends & family for peace of mind.

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android™ 9 and above on select devices [devices or phones] and in certain countries for age-eligible users.

To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android is a trademark of Google LLC.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

MADE IN INDIA



ATLANTA SYSTEMS PVT. LTD.

M-135, 2nd Floor, Outer Circle,
Connaught Place, New Delhi - 110001

<https://atlantasys.com>

Tel: +91 999 0333 888

Email: enquiry@atlantasys.com

Get Assistance at



Use camera or
QR scanner to scan